



0.75L 2.5L

OPAQUE FLOOR VARNISH
FLOORS AND STAIRS



HIGHLY
DURABLE



NO
UNDERCOAT



NO
STRIPPING

Easy as 1,2,3!

1  CHOOSE your project **iNDOOR** OR **OUTDOOR**

2  Pick your colour

3  EXPRESS YOURSELF
enjoy ;)





DRYING TIME



Recoat



Fully dry

TOOLS



Brush



Roller

TOOL CLEANING



Water

COVERAGE

2.5L e

1X ± 30 m²

PREPARATION

Preparation of the base surface is ESSENTIAL. The surface must be clean, dry and free of grease.

- UNFINISHED PARQUET FLOORING: Sand down (using a 120 grade sand paper) and remove dust carefully.
- GLAZED, PRE-LACQUERED or PAINTED PARQUET FLOORINGS:
 - In good condition: Wash, rinse and allow to dry. Lightly sand down (using a 240 grade sand paper) and remove dust.
 - Partially worn: Sand down to the bare wood and remove dust.
- WAXED or OILED PARQUET FLOORING: Remove wax using white spirit and sand down in two stages (60 grade followed by 120 grade sand paper) until the bare wood is exposed. Remove dust carefully.
- VENEERED COVERINGS: Wash, rinse and allow to dry. Sand down lightly (using a 240 grade sand paper) and remove dust. Any oily particles or film may prevent the bonding of the glazing agent. Washing is therefore essential. A soda-based (alkaline) cleaner should be used for this purpose.

PERFORMANCE

- Grips without undercoat
- Brings a modern decorative finish to wooden floors
- Resistant to stains and high traffic.

APPLICATION

Ideal conditions for application: between 12°C and 25°C, on dry wood and out of draughts.

1. Add the glazing agent to the product and stir before and during use making sure the product is thoroughly mixed together
2. Apply glaze using a (soft bristle) brush or a short-bristle roller (3 - 5 mm).
3. Apply in regular and overlapping strokes, avoiding any excess thickness. Apply finishing strokes in the direction of the wood grain.
4. Leave to dry for 3 hours.
5. Apply a 2nd coat. If necessary, apply a 3rd coat.
6. Leave to dry for 12 hours. Take care during the use of the room concerned in the first few days after application. The glazing agent achieves optimum hardness after 2 weeks.

WHITE COCOON
SATIN

GREY BETON
SATIN


ZINC
METALLIC

MELTING
METALLIC

INDUSTRIAL BLACK
LAQUERED GLOSS

RED FUSION
LAQUERED GLOSS

TIPS & TRICKS

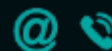

www.v33.co.uk
+44 (0) 1797 367555
Liberon Limited
Learoyd Road, Mountfield
Industrial Estate, New Romney,
Kent TN28 8XU